

 













 
 








 

 


 



 



 



 


 
 
 


 



 



 




 
 






Original		Recharge		Original		Recharge	
	Power BD		Power		Manual Skip		Pre Ch
	Drive Select		D. Menu		I<< Skip		I<<
	1		1		Skip >>I		>>I
	2		2		<< Slow/Search		<<
	3		3		Slow/Search >>		>>
	4		4		Stop		Stop
	5		5		Pause		Pause
	6		6		Play/x1.3		Play
	7		7		Rec		Rec
	8		8		Direct Tv Rec		TV/R
	9		9		i/Status		3D
	0		0		Exit		Exit
	Delete/*		Eject		Direct Navigator/Pop-up		List
	Input Select		AV		Guide		Guide
	CH+		Ch +		Function/Menu		Menu
	CH-		Ch -		Up		Up
	Prog/Check		Sleep		Down		Down



