



Original	Recharge
	Power
	Guide
	Tv Input
	AV Input
	Menu
	Text
	[≡♦]/STTL
	[+]/Aspect
	i
	Exit
	Netflix
	APPS
	Left
	Up
	Right
	Home
	OK











 

 











 

 
 
Original	Recharge
	Power
	Guide / EPG / -/--
	AV / Input / RDS
	Shift + AV / Input / RDS
	Menu / Home
	Text / Goto
	Subtitle / EQ
	Picture / Format
	Info / Angle
	Exit / Cancel / Clear
	Shift + Red / Netflix /
	Smart / List
	Left
	Up
	Right
	Shift + Menu /
	OK

Original	Recharge
	Option
	Down
	Back / Return
	Red
	Green
	Yellow
	Blue
	Vol+
	Mute
	PR+
	Vol-
	PR-
	1
	2
	3
	4
	5

Original	Recharge
	Setup / OPT /
	Down
	Back / Return
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Vol+
	Mute / Dimmer
	CH+ / Page+
	Vol-
	CH- / Page-
	1
	2
	3
	4
	5





Original		Recharge	
	6		6
	7		7
	8		8
	9		9
	?/Help		D.Menu / Top
	0		0
	Last View		Fav / Marker / PC
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Original		Recharge	

