


 








 

 
 
 
 

 


 
 
 

 
 
 

 

 
 


 

 

 

 



 
 


 
 
 

 
 
















 
 

 






Original		Recharge		Original		Recharge	
	Power		Power		i		Info
	AV		AV		P+		Ch +
	1		1		P-		Ch -
	2		2		Menu		Menu
	3		3		Exit		Exit
	4		4		Option		Options
	5		5		Back/Return		Back
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	Still		Format		TV		TV/R
	Recall		Pre Ch		Media		Media
	Vol+		Vol +		Guide		Guide
	Vol-		Vol -		[+]		3D
	Mute		Mute		Timer		Shift + AV





Original		Recharge		Original		Recharge	
	Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Audio		Dual				
	STTL		Subt				
	Sound		Shift + Dual				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

