



| Original   | Rechange      |
|------------|---------------|
| Power      | Power         |
| 1          | 1             |
| 2          | 2             |
| 3          | 3             |
| 4          | 4             |
| 5          | 5             |
| 6          | 6             |
| 7          | 7             |
| 8          | 8             |
| 9          | 9             |
| 0          | 0             |
| Cancel     | D. Menu       |
| Audio      | Dual          |
| Open/Close | Eject         |
| Status     | Subt          |
| Miracast   | TV/R          |
| Internet   | Shift + Smart |

| Original    | Rechange     |
|-------------|--------------|
| <<          | <<           |
| Play        | Play         |
| >>          | >>           |
| I<<         | I<<          |
| Pause       | Pause        |
| >>I         | >>I          |
| Stop        | Stop         |
| Menu/Pop-Up | Menu         |
| X/Exit      | Exit         |
| Option      | Options      |
| Return      | Back         |
| Top Menu    | Shift + Menu |
| Netflix     | Media        |
| Home        | Smart        |
| Up          | Up           |
| Down        | Down         |
| Right/I>    | Right        |



