



Original		Recharge		Original		Recharge	
	Power		Power		Menu		Menu / Home
	TV		Shift + 1		Left		Left
	Tuner/Band		Shift + 6		Enter / Set		OK
	FM Mode		TV/Radio /		Right		Right
	DVD/CD		Shift + 3		OSD		Smart / List
	DVD/CD		Shift + 2		Down		Down
	I<</Skip Down		I<< / Preset-		Return		Back / Return
	Power VCR		Shift + Power		Angle		Info / Angle
	>>I / Skip Up		>>I / Preset+		RDS		Shift + AV / Input / RDS
	TV / AV		AV / Input / RDS		Timer		Sleep / Timer
	<< Slow/Search		<< / Tune-		Setup		Setup / OPT /
	Slow/Search >>		>> / Tune+		Audio		Audio / Lang I/II
	Stop		Stop / Hold		Subtitle		Subtitle / EQ
	Pause		Pause / Step / Freeze		Play Mode		Picture / Format
	Play		Play / Slow		1		1
	Top Menu		D.Menu / Top		2		2
	Up		Up		3		3





Original	Recharge		
DISPLAY	Display	MEDIA DISPLAY	Display / Media
4	4	4	4
5	5	5	5
6	6	6	6
A-B REPEAT	A-B Repeat	REPEAT A-B	Yellow / YouTube / Repeat
7	7	7	7
8	8	8	8
9	9	9	9
REPEAT	Repeat	APP REPEAT	Green / APP / Repeat
CANCEL	Cancel	CLEAR EXIT CANCEL	Exit / Cancel / Clear
0	0	0	0
≥10 / -/-	-/- > 10	GUIDE EPG	Guide / EPG / -/-
POSITION MEMORY CENTER FOCUS	Position	CH PAGE +	CH+ / Page+
POSITION MEMORY CENTER FOCUS	Center Focus	CH PAGE -	CH- / Page-
SUBWOOFER LEVEL 6 D.MIX	Subwoofer	SHIFT + SURROUND	Shift + Eject / Surround
SUBWOOFER LEVEL 6 D.MIX	D.MIX	Prime Video RANDOM	Blue / Prime Video / Random
DOPL CH SELECT	Dolby PL	TITLE SOUND	Sound / Title

Original	Recharge		
DOPL CH SELECT	CH Select	NETFLIX SEARCH	Red / Netflix / Search
SFC TEST	SFC	SIZE ZOOM	Zoom / Size
SFC TEST	Test	GOTO TEXT	Text / Goto
MUTING SUPER SURROUND	Muting	DIMMER MUTE	Mute / Dimmer
MUTING SUPER SURROUND	Super Surround	SURROUND	Eject / Surround
- (TV) VOL	Vol-	VOL -	Vol-
+ (TV) VOL	Vol+	VOL +	Vol+

