



 



 
 

 

 

 
 


 




 






 







 











 




















Original		Rechange		Original		Rechange	
	Power		Power		Yellow		Yellow
	Picture		Format		Blue		Blue
	J/Sound		Dual		[≡♦]/FP		TV/R
	Set Up		Menu		[≡i]/Index		Smart
	CH+		Ch +		[≡+]/Hold/Still		Options
	CH-		Ch -		Tv/Text		Text
	Up		Up		Direct Tv Rec		Rec
	Down		Down		OIO		List
	Right		Right		Aspect		3D
	Left		Left		1		1
	Vol+		Vol +		2		2
	Vol-		Vol -		3		3
	Mute		Mute		4		4
	[+]		Info		5		5
	Tv/AV		AV		6		6
	Red		Red		7		7
	Green		Green		8		8












 




	Original	Recharge	Original	Recharge
	9			
	0/VCR			
	C			
	-/--			
	Play			
	Stop			
	>>			
	<<			





















Original	Recharge	Original	Recharge
 Power	 Power		
 N	 Options		
 Programme+	 Ch +		
 Programme-	 Ch -		
 STR	 Smart		
 ?/Help	 Media		





Original		Recharge		Original		Recharge	
	Power		Power				
	Rec		Rec				
	II/I>		Pause				
	Programme-		Ch -				
	Programme+		Ch +				
	?/Help		Media				
	STR		Smart				
	N		Options				

