

 

 

 
 

 

 



 
 


 
 
 


 

 

 

 
 

 

 




 
 


 

 

 


 




Original	Rechange	Original	Rechange
 Power	 Power	 Cancel	 Back
 Sleep	 Sleep	 Repeat	 Text
 Open/Close	 Eject	 Random	 Options
 AUX	 AV	 I<< CD	 I<<
 1	 1	 >>I CD	 >>I
 2	 2	 Stop CD	 Stop
 3	 3	 Play CD	 Play
 4	 4	 Pause CD	 Pause
 5	 5	 FM Mode/BP	 Smart
 6	 6	 Tuner/Band	 Media
 7	 7	 Rew Tape	 <<
 8	 8	 FF Tape	 >>
 9	 9	 Stop Tape	 Shift + Stop
 0	 0	 <> Tape	 Shift + Play
 >10	 Guide	 Sound Virtualizer	 Dual
 Display	 Info	 Counter Reset	 Red
 Program	 Shift + Sleep	 Rev Mode	 Green





	Original	Recharge	Original	Recharge
	Vol+			Vol +
	Vol-			Vol -
	Muting			Mute

