



Original	Rechange	Original	Rechange
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P+		CH+ / Page+
	P-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Open/Close		Eject / Surround
	Guide		Guide / EPG / -/--
	Mute		Mute / Dimmer
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Media Center		Display / Media
	Up		Up
	Home Menu		Menu / Home
	Pop-Up Menu		D.Menu / Top
	Down		Down
	Left		Left
	Right		Right



