 



 

 



 

 

 

 

 



 



 
 


 
 


 
 
 

 

 

 
 


 
 


 
 


 
 
 


 


 
 


 
 
 

 









 

 

 



 

 

 





Original		Recharge		Original		Recharge	
	Power		Power		9		9
	Power Tv		Shift + Power		Vol+		Vol+
	Vol+ Tv		Shift + Vol+		Cancel		Exit / Cancel / Clear
	DVD		Shift + 2		0		0
	TV/AV Tv		TV/Radio /		+10		Guide / EPG / -/-
	Vol- Tv		Shift + Vol-		Vol-		Vol-
	FM		Shift + 5		I<</Skip Down		I<< / Preset-
	1		1		>>/Skip Up		>>I / Preset+
	2		2		<< Slow Search		<< / Tune-
	3		3		Slow Search >>		>> / Tune+
	EXT-IN		Eject / Surround		Stop		Stop / Hold
	4		4		Pause		Pause / Step / Freeze
	5		5		Play		Play / Slow
	6		6		Top Menu/Direct Navigator		Smart / List
	One Touch Play		Display / Media		Up		Up
	7		7		Menu/Play List		Menu / Home
	8		8		Left		Left





Original		Rechange		Original		Rechange	
	Enter		OK				
	Right		Right				
	Functions		Info / Angle				
	Down		Down				
	Return-Setup		Back / Return				
	SW.Level		Zoom / Size				
	EQ		Subtitle / EQ				
	C.Focus		Sound / Title				
	S.SRD/PLII		Picture / Format				
	FL Display/Sleep		Sleep / Timer				
	Test		Text / Goto				
	Play Mode/-CH Select		CH- / Page-				
	Muting		Mute / Dimmer				

