


 

 



 



 







 



 



 



 
 
 

 

 






 
 


 
 

 

 



 



 








Original	Recharge	Original	Recharge
 Power	 Power	 Direct Tv Rec	 TV/R
 HDD	 Shift + Media	 ShowView	 3D
 DVD	 Media	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Vol+	 Vol +
 3	 3	 Vol-	 Vol -
 4	 4	 I<< Skip	 I<<
 5	 5	 Skip >>I	 >>I
 6	 6	 << Slow/Search	 <<
 7	 7	 Slow/Search >>	 >>
 8	 8	 Pause	 Pause
 9	 9	 Stop	 Stop
 0	 0	 Play	 Play
 -/--	 Guide	 Menu / Play List	 Menu
 Cancel	 Exit	 Top Menu / Direct Navigator	 D. Menu
 AV	 AV	 Functions	 Options
 Input Select	 Eject	 Return	 Back











 

 
 



 

 

 

 
 
 





 
 


 




Original		Rechange		Original		Rechange	
	Up		Up		A/Display		Red
	Down		Down		A/Display		Info
	Right		Right		B/Position		Green
	Left		Left		C/Audio		Yellow
	Enter		Ok		C/Audio		Dual
	Rec		Rec		D/AV Link		Blue
	Frame II >	+	Shift + Right				
	< Frame	+	Shift + Left				
	Manual Skip		Format				
	Erase		Text				
	Time Slip		Smart				
	Prog/Check		Sleep				
	Timer	+	Shift + AV				
	Marker		Pre Ch				
	Dubbing		Subt				
	Status		List				
	Rec Mode	+	Shift + Rec				







	Original	Recharge
	Power	 Power
	CH+	 Ch +
	CH-	 Ch -
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0	 0
	-/--	 GUIDE Guide
	A	 Red
	B	 Green
	C	 Yellow

	Original	Recharge
	D	 Blue

