



Original		Recharge		Original		Recharge	
	Power		Power		Slow/Search >>		>>
	1		1		<< Slow/Search		<<
	2		2		>>I/Skip Up		>>I
	3		3		I<</Skip Down		I<<
	4		4		Play DVD/CD		Play
	5		5		Play USB		Red
	6		6		FM/AM/Ext-In		TV/R
	7		7		Top Menu/Direct Navigator		Shift + Menu
	8		8		Start		Blue
	9		9		Menu/Play List		Menu
	0		0		Return		Back
	-/--/+10		Guide		Up		Up
	>/Option		Options		Down		Down
	Vol+		Vol +		Right		Right
	Vol-		Vol -		Left		Left
	Stop		Stop		OK		Ok
	Pause		Pause		Functions		Pre Ch





Original		Recharge		Original		Recharge	
	Setup		D. Menu				
	Sound		Dual				
	Cancel		Exit				
	Play Mode/Repeat		Text				
	Sleep/Timer Play		Sleep				
	Clock/Timer		AV				
	Muting		Mute				
	FL Display		Info				
	One Touch Play		Smart				
	Power Tv		Shift + Power				
	TV/AV Tv		Shift + AV				
	Vol+ Tv		Shift + Vol +				
	Vol- Tv		Shift + Vol -				

