






























 



 

 

 

 

 













 



 










Original		Recharge		Original		Recharge	
	Power		Power		Yellow		Yellow
	Input		AV		Blue		Blue
	i		Info		Vol+		Vol +
	[G]		Guide		Vol-		Vol -
	*1		Format		Mute		Mute
	Home		Smart		P+		Ch +
	Netflix		Media		P-		Ch -
	*2		3D		1		1
	Exit		Exit		2		2
	Back		Back		3		3
	Up		Up		4		4
	Down		Down		5		5
	Right		Right		6		6
	Left		Left		7		7
	OK		Ok		8		8
	Red		Red		9		9
	Green		Green		0		0





	Original	Recharge	Original	Recharge
	Lang	SOUND DUAL		Dual
	TXT	REPEAT TEXT		Text
	<<			<<
	Play	PLAY MODE		Play
	>>			>>
	Stop			Stop
	Pause			Pause
	Rec	REC MODE		Rec

