



 







 



 



 







 

 













 
 





 



























Original	Recharge	Original	Recharge
 Power	 Power	 Vieta Cast	 Smart / List
 Open/Close	 Eject / Surround	 I<< Skip	 I<< / Preset-
 1	 1	 Skip >>I	 >>I / Preset+
 2	 2	 << Slow/Search	 << / Tune-
 3	 3	 Slow/Search >>	 >> / Tune+
 4	 4	 Stop	 Stop / Hold
 5	 5	 Pause	 Pause / Step / Freeze
 6	 6	 Play	 Play / Slow
 7	 7	 Status	 Text / Goto
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Option	 Shift + Setup / OPT / Tools
 0	 0	 Return	 Back / Return
 Cancel	 Shift + Exit / Cancel / Clear	 Top Menu/Direct Navigator	 D.Menu / Top
 Audio	 Audio / Lang I/II	 Pop-Up Menu	 Shift + Menu /
 Receiver Vol+	 Vol+	 Function Menu	 Menu / Home
 Receiver Vol-	 Vol-	 Up	 Up
 Receiver Mute	 Mute / Dimmer	 Down	 Down

Original	Recharge	Original	Recharge
 Vieta Cast	 Smart / List	 Smart / List	 Smart / List
 I<< Skip	 I<< / Preset-	 I<< / Preset-	 I<< / Preset-
 Skip >>I	 >>I / Preset+	 >>I / Preset+	 >>I / Preset+
 << Slow/Search	 << / Tune-	 << / Tune-	 << / Tune-
 Slow/Search >>	 >> / Tune+	 >> / Tune+	 >> / Tune+
 Stop	 Stop / Hold	 Stop / Hold	 Stop / Hold
 Pause	 Pause / Step / Freeze	 Pause / Step / Freeze	 Pause / Step / Freeze
 Play	 Play / Slow	 Play / Slow	 Play / Slow
 Status	 Text / Goto	 Text / Goto	 Text / Goto
 Exit	 Exit / Cancel / Clear	 Exit / Cancel / Clear	 Exit / Cancel / Clear
 Option	 Shift + Setup / OPT / Tools	 Shift + Setup / OPT / Tools	 Shift + Setup / OPT / Tools
 Return	 Back / Return	 Back / Return	 Back / Return
 Top Menu/Direct Navigator	 D.Menu / Top	 D.Menu / Top	 D.Menu / Top
 Pop-Up Menu	 Shift + Menu /	 Shift + Menu /	 Shift + Menu /
 Function Menu	 Menu / Home	 Menu / Home	 Menu / Home
 Up	 Up	 Up	 Up
 Down	 Down	 Down	 Down





Original	Recharge	Original	Recharge
	Right		Right
	Left		Left
	OK		OK
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Setup		Setup / OPT /
	PIP		Picture / Format
	Display		Display / Media
	Select Drive		AV / Input / RDS
	Power Tv		Shift + Power
	AV Tv		Shift + AV / Input / RDS
	TV Vol+		Shift + Vol+
	TV Vol-		Shift + Vol-
	TV CH+		CH+ / Page+
	TV CH-		CH- / Page-

