


Original		Recharge		Original		Recharge	
	Picture Mode		Picture / Format		CH+ / Tracking/V-Lock+		CH+ / Page+
	DVD Status		Info / Angle		Cancel / Reset		Exit / Cancel / Clear
	Dubbing		Yellow / YouTube / Repeat		-/-- / >=10		Guide / EPG / -/--
	VHS/DVD		Smart / List		Play		Play / Slow
	Quick Replay		Red / Netflix / Search		Up		Up
	Group		Zoom / Size		Left		Left
	P.Memory		Fav / Marker / PC		Enter		OK
	Return		Back / Return		Right		Right
	AV Enhancer		AV / Input / RDS		Down		Down
	Direct Navigator / Top Menu		D.Menu / Top		Display		Display / Media
	Play List / Menu		Menu / Home		Setup		Setup / OPT /
	Play Mode		Shift + Play /		Timer		Sleep / Timer
	REW / << Slow/Search		<< / Tune-		0		0
	FF / Slow/Search		>> / Tune+		Audio		Audio / Lang I/II
	VHS/DVD Power		Power		1		1
	Pause / Slow		Pause / Step / Freeze		2		2
	CH- / Tracking/V-Lock-		CH- / Page-		3		3

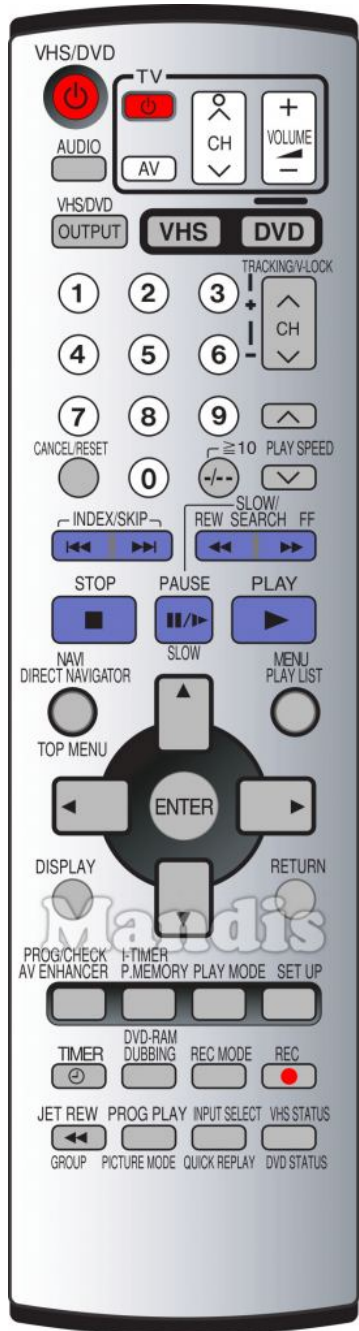







	Original	Recharge	
	Prog Play	Shift + Play /	
	I-Timer	Shift + Sleep / Timer	
	Cancel / Reset	Exit / Cancel / Clear	
	VHS/DVD	Smart / List	
	Display	Display / Media	
	VCR Status	Info / Angle	
	Dubbing	Yellow / YouTube / Repeat	
	Jet Rew	Shift + << /	
	Pause / Slow	Pause / Step / Freeze	
	CH+ / Tracking/V-Lock+	CH+ / Page+	
	CH- / Tracking/V-Lock-	CH- / Page-	
	VHS/DVD Power	Power	
	-/-- / >=10	Guide / EPG / -/--	
	Return	Back / Return	
	Prog/Check	TV/Radio /	
	I<< Index	I<< / Preset-	
	Index >>I	>>I / Preset+	

	Original	Recharge	
	FF	>> / Tune+	
	Play	Play / Slow	
	Menu	Menu / Home	
	Up	Up	
	Left	Left	
	Enter	OK	
	Right	Right	
	Down	Down	
	Stop	Stop / Hold	
	Rec Mode	Shift + Rec / Rec Mode	
	Timer	Sleep / Timer	
	Rec	Rec / Rec Mode	
	0	0	
	Audio	Audio / Lang I/II	
	1	1	
	2	2	
	3	3	





