



Original	Recharge	Original	Recharge
	Power		Power
	Power Tv		Shift + Power
	Vol+ Tv		Vol+
	CH+ Tv		Shift + CH+ /
	Drive Select		Picture / Format
	Input AV Tv		Shift + AV / Input / RDS
	Vol- Tv		Vol-
	CH- Tv		Shift + CH- /
	1		1
	2		2
	3		3
	Page/CH+		CH+ / Page+
	4		4
	5		5
	6		6
	Page/CH-		CH- / Page-
	7		7
	8		8
	9		9
	Last View		Fav / Marker / PC
	0		0
	Radio/Tv		TV/Radio /
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Stop		Stop / Hold
	Pause/PAUSE LIVE TV		Pause / Step / Freeze
	Play		Play / Slow
	i/Status		Info / Angle
	X/Exit		Exit / Cancel / Clear
	Guide		Guide / EPG / -/-
	Video Menu		D.Menu / Top
	Left		Left





Original	Recharge
	OK
	Up
	Right
	HOME MENU Menu / Home
	SHIFT + OPT-TOOLS Setup / Setup / OPT / Tools
	Down
	RETURN BACK Back / Return
	NETFLIX SEARCH Red / Netflix / Search
	APP REPEAT Green / APP / Repeat
	YouTube REPEAT A-B Yellow / YouTube / Repeat
	Prime Video RANDOM Blue / Prime Video / Random
	REC MODE Rec / Rec Mode
	SHIFT + REC MODE Shift + Rec / Rec Mode
	GOTO TEXT Text / Goto
	EQ SUBTITLE Subtitle / EQ
	SHIFT + PROGRAM TV/RADIO Shift + TV/Radio / Program
	RDS AV INPUT AV / Input / RDS

Original	Recharge
	TIME SLEEP Sleep / Timer
	LANG I/II AUDIO Audio / Lang I/II
	OPT-TOOLS SETUP Setup / OPT /
	SURROUND Eject / Surround
	LIST SMART Smart / List
	MEDIA DISPLAY Display / Media

