











 







 
 



















 











Original	Rechange	Original	Rechange
Power		Power	Power
Picture		Picture / Format	
AV input		AV / Input / RDS	
Input Tv		TV/Radio /	
Menu		Menu / Home	
Text		Text / Goto	
STTL		Subtitle / EQ	
APPS		Display / Media	
i		Info / Angle	
X/Exit		Exit / Cancel / Clear	
Home		Shift + Menu /	
Guide		Guide / EPG / -/--	
Netflix		Shift + Red / Netflix /	
Option		Setup / OPT /	
Return/Back		Back / Return	
Up		Up	
Down		Down	
Right		Right	
Left		Left	
OK		OK	
Red		Red / Netflix / Search	
Green		Green / APP / Repeat	
Yellow		Yellow / YouTube / Repeat	
Blue		Blue / Prime Video / Random	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
CH+		CH+ / Page+	
CH-		CH- / Page-	
1		1	
2		2	
3		3	
4		4	
5		5	



Original	Recharge	Original	Recharge
6		6	
7		7	
8		8	
9		9	
0		0	
Last View		Fav / Marker / PC	
?/eHelp		Audio / Lang I/II	
My APP	 + 	Shift + Green / APP /	
<<		<< / Tune-	
Play		Play / Slow	
>>		>> / Tune+	
I<<		I<< / Preset-	
Pause		Pause / Step / Freeze	
>>I		>>I / Preset+	
Stop		Stop / Hold	
Rec		Rec / Rec Mode	

