



Original	Recharge
Power	Power
Power Tv	Shift + Power
Vol+ Tv	Shift + Vol+
DVD	Shift + 2
TV/AV Tv	Shift + AV / Input / RDS
Vol- Tv	Shift + Vol-
FM	TV/Radio /
1	1
2	2
3	3
EXT-IN	AV / Input / RDS
4	4
5	5
6	6
Quick OSD	Fav / Marker / PC
7	7
8	8

Original	Recharge
9	9
Vol+	Vol+
Cancel	Exit / Cancel / Clear
0	0
+10	Guide / EPG / -/-
Vol-	Vol-
I<</Skip Down	I<< / Preset-
>>I/Skip Up	>>I / Preset+
<< Slow Search	<< / Tune-
Slow Search >>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
Top Menu/Direct Navigator	D.Menu / Top
Up	Up
Menu/Play List	Menu / Home
Left	Left



