




 

 


 



 

 


 
 


 














 











 

 

 

 

 







| Original | Recharge |
|--|---|
|  Power |  Power |
|  Menu |  Menu / Home |
|  Picture |  Picture / Format |
|  Input Tv |  TV/Radio / |
|  Input AV |  AV / Input / RDS |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  i |  Info / Angle |
|  X/Exit |  Exit / Cancel / Clear |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Option |  Setup / OPT / |
|  Down |  Down |

| Original | Recharge |
|---|---|
|  Back/Return |  Back / Return |
|  Netflix |  Shift + Red / Netflix / |
|  Home |  Shift + Menu / |
|  Guide |  Guide / EPG / -/- |
|  Mute |  Mute / Dimmer |
|  Text |  Text / Goto |
|  STTL |  Subtitle / EQ |
|  List/Provider |  Smart / List |
|  Vol+ |  Vol+ |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  CH- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |





| Original | | Rechange | |
|---|---------|---|-----------------------|
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | ?/eHelp |  | D.Menu / Top |
|  | 0 |  | 0 |
|  | Recall |  | Fav / Marker / PC |
|  | << |  | << / Tune- |
|  | Play |  | Play / Slow |
|  | >> |  | >> / Tune+ |
|  | I<< |  | I<< / Preset- |
|  | Pause |  | Pause / Step / Freeze |
|  | >>I |  | >>I / Preset+ |
|  | My APP |  | Shift + Green / APP / |
|  | Stop |  | Stop / Hold |
|  | Rec |  | Rec / Rec Mode |

| Original | Rechange |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

