
 






Original		Rechange		Original		Rechange	
	Power		Power		Mute		Mute / Dimmer
	3D		Shift + 3		P+		CH+ / Page+
	TV		Shift + 1		Vol-		Vol-
	TV		TV/Radio /		P-		CH- / Page-
	1		1		Info		Info / Angle
	2		2		Option		Setup / OPT /
	3		3		Smart Tv		Smart / List
	4		4		Guide		Guide / EPG / -/-
	5		5		Menu		Menu / Home
	6		6		Up		Up
	7		7		Left		Left
	8		8		OK		OK
	9		9		Right		Right
	Eco		Display / Media		Back		Back / Return
	0		0		Down		Down
	Source		AV / Input / RDS		Exit		Exit / Cancel / Clear
	Vol+		Vol+		Zoom-		Shift + Down





Original		Rechange		Original		Rechange	
	Zoom+		Shift + Up		>		>>  / Preset+
	@/Home		D.Menu / Top		<<		<< / Tune-
	Sleep		Sleep / Timer		Rec		Rec / Rec Mode
	Pre-CH		Shift + Back / Return		>>		>> / Tune+
	FAV		Fav / Marker / PC				
	List		Shift + Smart / List				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	OO/Lang		Audio / Lang I/II				
	Subtitle		Subtitle / EQ				
	Text		Text / Goto				
	I<		I<< / Preset-				
	Stop		Stop / Hold				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				

