



Original		Recharge		Original		Recharge	
	Power		Power		[i]/Info		Info / Angle
	DVD (Universal Mode)		Shift + 2		<<		<< / Tune-
	STB (Universal Mode)		Shift + 3		Play/Pause		Play / Slow
	HTS (Universal Mode)		Shift + 4		>>		>> / Tune+
	Red/Demo		Red / Netflix / Search		Stop		Stop / Hold
	Green		Green / APP / Repeat		Rec		Rec / Rec Mode
	Yellow/[I]		Yellow / YouTube / Repeat		Vol+		Vol+
	Blue		Blue / Prime Video / Random		Mute		Mute / Dimmer
	Home		Menu / Home		PR+		CH+ / Page+
	Guide		Guide / EPG / -/--		Vol-		Vol-
	Options		Setup / OPT /		[<>]/Format		Picture / Format
	Up		Up		PR-		CH- / Page-
	Left		Left		Net TV		Smart / List
	OK		OK		Teletext		Text / Goto
	Right		Right		Disc Menu		D.Menu / Top
	Back		Back / Return		1		1
	Down		Down		2		2





Original		Rechange	
3 DEF	3	CD - STB 3	3
4 GHI	4	VIDEO 4	4
5 JKL	5	TAPE 5	5
6 MNO	6	TUNER 6	6
7 PQRS	7	AUX - HDD 7	7
8 TUV	8	USB 8	8
9 WXYZ	9	BLUETOOTH 9	9
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
0 .@	0	HDMI - BAT 0	0
Source	Source	RDS AV INPUT	AV / Input / RDS
Ambilight	Ambilight	MEDIA DISPLAY	Display / Media

Original		Rechange	

