




 



 
 


 



















 

 
 
 

 
 



 
 






 









 


 

 




Original		Rechange		Original		Rechange	
	Power		Power		Pause		Pause
	Eject		Eject		>		>>
	USB		Media		Stop		Stop
	Radio		TV/R		Vol+		Vol +
	Aux/Di/MP3 Link		AV		Vol-		Vol -
	HDMI		Pre Ch		Mute		Mute
	Disc		Menu		Treble		Ch +
	Info		Info		Bass		Ch -
	Back/Title		Back		Ambisound		Smart
	Options		Options		1		1
	Up		Up		2		2
	Down		Down		3		3
	Right/>>>		Right		4		4
	Left/;<<		Left		5		5
	OK		Ok		6		6
	I<		I<<		7		7
	Play		Play		8		8





Original		Recharge		Original		Recharge	
<b>9</b>	9	<b>9</b>	9				
<b>0</b>	0	<b>0</b>	0				
<b>SUBTITLE</b>	Subtitle	<b>AD SUBT</b>	Subt				
<b>AUDIO SYNC</b>	Audio Sync	<b>PICTURE FORMAT</b>	Format				
<b>ZOOM</b>	Zoom	<b>SHIFT + ZOOM</b>	Shift + Eject				
<b>ANGLE</b>	Angle	<b>PROG SLEEP</b>	Sleep				
<b>REPEAT PROGRAM</b>	Repeat/Program	<b>REPEAT TEXT</b>	Text				
<b>SOUND</b>	Sound	<b>SOUND DUAL</b>	Dual				

