

 



 
 
 
 
 

 

 
 

 
 



 


 
 
 





 







 
 

 

 







Original		Rechange		Original		Rechange	
	Power		Power		Treble-		Ch -
	Pause		Pause		Voice		Dual
	COAX		Red		Movie		Pre Ch
	Optical		Green		Music		Guide
	AUX		Yellow		Audio Sync+		Right
	USB		Blue		Audio Sync-		Left
	Bluetooth		Smart		Night On		3
	HDMI Arc		Media		Off Night		1
	I<		I<<				
	Play		Play				
	>I		>>I				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				
	Bass+		Up				
	Bass-		Down				
	Treble+		Ch +				

