








 
 
 





 






 
 
 

 


 


 




Original	Recharge
 Power	 Power
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 ([/])	 Zoom / Size
 *	 D.Menu / Top
 [<>]	 Picture / Format
 TV GUIDE	 Guide / EPG / -/-
 SEARCH	 SHIFT +  Shift + Red / Netflix /
 SOURCES	 RDS AV INPUT AV / Input / RDS
 SMART TV	 LIST SMART Smart / List
 HOME	 HOME MENU Menu / Home
 TV EXIT	 CLEAR EXIT Exit / Cancel / Clear
 Red	 NETFLIX SEARCH Red / Netflix / Search

Original	Recharge
 Green	 APP REPEAT Green / APP / Repeat
 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat
 Blue	 Prime Video RANDOM Blue / Prime Video / Random
 i+/Info	 ANGLE INFO Info / Angle
 Options	 OPT-TOOLS SETUP Setup / OPT /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 RETURN BACK Back / Return
 Down	 Down
 MULTIVIEW	 MEDIA DISPLAY Display / Media
 Vol+	 VOL Vol+
 LIST	 SHIFT +  LIST SMART Shift + Smart / List
 CH+	 CH PAGE CH+ / Page+
 Vol-	 VOL Vol-
 Mute	 DIMMER MUTE Mute / Dimmer





Original	Rechange	Original	Rechange
CH-	CH- / Page-		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
Subtitle	Subtitle / EQ		
0	0		
Text	Text / Goto		

