




 
 

 
 
 
 
 
 
 

 
 
 

 
 
 

 



 

 
 
 
 

 






Original	Recharge	Original	Recharge
 Power	 Power	 Sleep/Timer	 Sleep
 I<<	 I<<	 Clock/Scan	 AV
 Play	 Play		
 Pause	 Pause		
 >>I	 >>I		
 Stop	 Stop		
 Menu	 Menu		
 Mode	 Smart		
 OK	 Ok		
 Album/Presets	 Ch +		
 Album/Presets	 Ch -		
 +	 Vol +		
 -	 Vol -		
 Mute	 Mute		
 Sound	 Dual		
 Info/RDS	 Info		
 Prog	 D. Menu		



