





 











 











 











 



 






Original	Recharge	Original	Recharge
 Power	 Power	 Timer	 AV
 Open/Close	 Eject	 Sleep	 Sleep
 USB	 Blue	 DBB	 Dual
 CD	 Yellow	 DSC	 Subt
 Tuner	 Green	 RDS/News	 TV/R
 AUX	 Red	 Mute	 Mute
 Vol-	 Vol -	 Repeat	 Text
 Vol+	 Vol +	 Shuffle	 Format
 I<<	 I<<		
 >>I	 >>I		
 Album/Preset	 Ch -		
 Album/Preset	 Ch +		
 Stop	 Stop		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 Program	 Shift + Sleep		
 Clock/Display	 Info		









