

 

 
 

 
 



 

 

 
 



 




 

 




 

 
 



 



 

 


 
 
 











 

 


 

 


 




Original	Rechange	Original	Rechange
 Power	 Power	 Pause	 Pause
 O	 Guide	 Up	 Up
 Rec	 Rec	 Left	 Left
 I<<	 I<<	 OK	 Ok
 Red	 Red	 Right	 Right
 Green/[ ]	 Green	 Down	 Down
 Stop	 Stop	 Vol+	 Vol +
 Play	 Play	 Vol-	 Vol -
 Yellow / List	 Yellow	 Mute	 Mute
 >>I	 >>I	 Smart J	 Smart
 PIP [ ]	 Blue	 Smart [ ]	 Media
 AV/[?]	 AV	 P+	 Ch +
 I-II/[≡≡]	 Dual	 P-	 Ch -
 [<>]/[+]	 Format	 1	 1
 [-O-]	 Exit	 2	 2
 Menu	 Menu	 3	 3
 [≡]	 Text	 4	 4







 
 

 





 

 
 








 


 

 

 

 


 
 



 
 
 
 
 
 

 
 
 




 


 



Original	Rechange
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [i+]	 DISPLAY INFO Info
 P<P	 FAV PRE-CH Pre Ch

Original	Rechange







Original	Rechange	Original	Rechange
 Power	 Power	 [≡]	 REPEAT TEXT Text
 O	 GUIDE Guide	 Up	 Up
 Rec	 REC MODE Rec	 Left	 Left
 I<<	 I<<	 OK	 OK Ok
 Red	 A Red	 Right	 Right
 Green/[[]]	 B Green	 Down	 Down
 Stop	 Stop	 Vol+	 Vol +
 Play	 PLAY MODE Play	 Vol-	 Vol -
 Yellow / List	 C Yellow	 Mute	 MUTE Mute
 PIP [■]	 D Blue	 Smart J	 HOME SMART Smart
 >>I	 >>I	 Smart [ ]	 APP MEDIA Media
 AV/[?]	 TIMER AV AV	 P+	 + CH Ch +
 I-II/[≡≡]	 SOUND DUAL Dual	 P-	 CH - Ch -
 [<>]/[+]	 PICTURE FORMAT Format	 1	 1 1
 -O-	 CLEAR EXIT Exit	 2	 2 2
 Menu	 TOP MENU MENU Menu	 3	 3 3
 Pause	 II Pause	 4	 4 4






 
 

 




 

 

 
 



 

 
 
 



 



Original		Rechange		Original		Rechange	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	[i+]		Info				
	P<P		Pre Ch				





Original	Recharge
 Power	 Power
 I<<	 I<<
 >>I	 >>I
 AV/[?]	 AV
 I-II[≡ ≡]	 Dual
 [<>]/[+]	 Format
 -O-	 Exit
 Pause	 Pause
 [≡]	 Text
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Recharge
 Smart J	 Smart
 Smart [ ]	 Media
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 Pre Ch

