




 



 
 

 


 
 

 

 

 

 

 
 
 





Original	Rechange
 Power	 Power
 O	 Guide
 Rec	 Rec
 I<<	 I<<
 Red	 Red
 Green/[]	 Green
 Stop	 Stop
 Play	 Play
 Yellow / List	 Yellow
 >>I	 >>I
 PIP []	 Blue
 AV/[?]	 AV
 I-II/[≡≡]	 Dual
 [<>]/[+]	 Format
 [-O-]	 Exit
 Menu	 Menu
 [≡]	 Text

Original	Rechange
 Pause	 Pause
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Smart J	 Smart
 Smart []	 Media
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4





 
 

 





 

 
 








 


 

 

 

 


 
 



 
 
 
 
 
 

 
 
 




 


 





Original		Recharge	
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
[i+]	[i+]	DISPLAY INFO	Info
P<P	P<P	FAV PRE-CH	Pre Ch

Original		Recharge	





Original	Recharge	Original	Recharge
 Power	 Power	 [≡]	 Text
 O	 Guide	 Up	 Up
 Rec	 Rec	 Left	 Left
 I<<	 I<<	 OK	 Ok
 Red	 Red	 Right	 Right
 Green/[]	 Green	 Down	 Down
 Stop	 Stop	 Vol+	 Vol +
 Play	 Play	 Vol-	 Vol -
 Yellow / List	 Yellow	 Mute	 Mute
 PIP [■]	 Blue	 Smart ♪	 Smart
 >>I	 >>I	 Smart []	 Media
 AV/[?]	 AV	 P+	 Ch +
 I-II/[≡≡]	 Dual	 P-	 Ch -
 [<>]/[+]	 Format	 1	 1
 -O-	 Exit	 2	 2
 Menu	 Menu	 3	 3
 Pause	 Pause	 4	 4








 
 

 
 

 



 

 
 



 
 
 
 



 
 
Original		Recharge	
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info
	P<P		Pre Ch

Original		Recharge	





Original	Recharge
 Power	 Power
 I<<	 I<<
 >>I	 >>I
 AV/[?]	 AV
 I-II[≡ ≡]	 Dual
 [<lt; >]="" [+]<="" td=""> <td> Format</td> </lt;>	 Format
 -O-	 Exit
 Pause	 Pause
 [≡]	 Text
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Recharge
 Smart J	 Smart
 Smart []	 Media
 P+	 Ch +
 P-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P<P	 Pre Ch

