



Original		Recharge		Original		Recharge	
	Power		Power		Rec		Rec
	Info		Info		Red		Red
	Search		TV/R		Green		Green
	Sources		AV		Yellow		Yellow
	Up		Up		Blue		Blue
	Down		Down		Vol+		Vol +
	Right		Right		Vol-		Vol -
	Left		Left		Mute		Mute
	OK		Ok		Netflix		Shift + Media
	←		Pre Ch		Windows		Media
	Home		Smart		Rakuten Tv		Shift + Smart
	≡		Dual		CH+		Ch +
	<<		<<		CH-		Ch -
	Play		Play		Exit/Tv		Exit
	>>		>>		1		1
	Stop		Stop		2		2
	Pause		Pause		3		3





Original		Recharge		Original		Recharge	
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
TEXT	Text	REPEAT TEXT	Text				
LIST TV GUIDE	List/Tv Guide	-/- GUIDE	Guide				

