


 
 



 

 
 
 
 
 
 
 
 

 
 

 
 

 

 


 

 






 





 





 

 

 




 






 

 

 

 



 

 

 

 

 

 

 




Original	Rechange
 Power	 Power
 TV / Video	 TV/R
 DVD	 Smart
 VCR	 Media
 Open / Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Display	 Info
 Up	 Up

Original	Rechange
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Stop	 Stop
 Play	 Play
 Pause / Step	 Pause
 << REW	 <<
 >> FWD	 >>
 Record	 Rec
 Clear	 Exit





Original	Rechange
 Power	 Power
 Open / Close	 Eject
 DVD	 Smart
 VCR	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Return	 Back
 Display	 Info
 List / Disc Menu	 D. Menu

Original	Rechange
 System Menu	 Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 <	 <<
 >	 >>
 Stop	 Stop
 Play	 Play
 Pause / Step	 Pause
 << REW	 <<
 >> FWD	 >>
 Thumbnail	 3D
 Chapter	 Format
 Timer	 AV
 Record	 Rec





Original	Recharge
REC MODE Rec. Mode	 Blue
REPEAT Repeat	 Text
TITLE Title	 Options
AUDIO Audio	 Dual
ZOOM Zoom	 Shift + Eject
SEARCH Search	 TV/R
MARKER Marker	 Pre Ch
D.DUBBING D.Dubbing	 Guide
CLEAR Clear	 Exit
SHOWVIEW / VideoPlus+	 Subt

Original	Recharge

