 

 



 

 
 
 
 
 
 
 


 
 




 
 
 


 



 




 
 
 







 
 







 




 
 

 
 
 
 




Original		Recharge		Original		Recharge	
	Power DVD		Power		A-B/Repeat		Options
	Display		Info		Clear		Exit
	SYS Video		Back		FTS/Program		Sleep
	On/Off PBC		Media		Menu System		Menu
	1		1		Menu Disc		D. Menu
	2		2		Up		Up
	3		3		Down		Down
	4		4		Right		Right
	5		5		Left		Left
	6		6		OK		Ok
	7		7		Stop/Return		Stop
	8		8		Play		Play
	9		9		Pause		Pause
	0		0		>>		>>
	+10		Guide		<<		<<
	Title		Pre Ch		>		>>
	Repeat		Text		<		<<





Original	Rechange
FWD Slow	Ch +
REV Slow	Ch -
Subtitle	Subt
Angle	Format
Zoom	Eject
Audio	Dual
Search	TV/R
Preview	Green
Mode Sound	Yellow
3D Sound	3D
Power Speakers	Shift + Power
1-2-3 Input	AV
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Bass+	Shift + Up
Bass-	Shift + Down

Original	Rechange
Treble+	Shift + Ch +
Treble-	Shift + Ch -

