
 
 









 







 

 
 


 


Original	Recharge
 Power	 Power
 ambilight	 D.Menu / Top
 info	 Info / Angle
 O	 Display / Media
 Pair/Sources	 AV / Input / RDS
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 ←	 Back / Return
 Home	 Menu / Home
 =	 Setup / OPT /
 <<	 << / Tune-
 ▶	 Play / Slow
 >>	 >> / Tune+
 ■	 Stop / Hold

Original	Recharge
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Netflix	 Shift + Red / Netflix /
 Rakuten Tv	 TV/Radio /
 Windows	 Smart / List
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Exit/Tv	 Exit / Cancel / Clear
 1	 1
 2	 2





Original	Recharge	Original	Recharge
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 List/Tv Guide	 Guide / EPG / -/--		
 Text	 Text / Goto		

