 

 

 

 



 

 

 


 


 



 



 

 

 

 
 
 



 

 

 



 



 

 

 

 

 

 









Original	Rechange	Original	Rechange
 Setup	 Setup / OPT /	 Pause	 Pause / Step / Freeze
 Power	 Power	 Play	 Play / Slow
 DVD Menu	 D.Menu / Top	 OK	 OK
 Source	 AV / Input / RDS	 Radio(Tv)	 TV/Radio /
 LCD On/Off	 Shift + Power	 List	 Smart / List
 Exit	 Exit / Cancel / Clear	 FAV	 Fav / Marker / PC
 Stop	 Stop / Hold	 Info	 Info / Angle
 I<<	 I<< / Preset-	 EPG	 Guide / EPG / -/-
 >>I	 >>I / Preset+	 Subtitle	 Subtitle / EQ
 CH+	 CH+ / Page+	 Audio	 Audio / Lang I/II
 Up	 Up	 Teletext	 Text / Goto
 CH-	 CH- / Page-	 Mute	 Mute / Dimmer
 Down	 Down	 Vol-	 Vol-
 Left	 Left	 Vol+	 Vol+
 <<	 << / Tune-	 1	 1
 >>	 >> / Tune+	 2	 2
 Right	 Right	 3	 3



