



| Original | Recharge |
|--|---|
|  Power |  Power |
|  Source |  AV / Input / RDS |
|  USB |  Shift + 8 |
|  Tv/DVD |  TV/Radio / |
|  Open/Close |  Eject / Surround |
|  Tools |  Shift + Setup / OPT / Tools |
|  Select |  OK |
|  Clear |  Exit / Cancel / Clear |
|  Repeat |  Green / APP / Repeat |
|  Disc Menu |  D.Menu / Top |
|  Setup |  Setup / OPT / |
|  Up |  Up |
|  Left |  Left |
|  OK |  Shift + OK |
|  Right |  Right |
|  Down |  Down |
|  Back |  Back / Return |

| Original | Recharge |
|--|---|
|  Display |  Display / Media |
|  << |  << / Tune- |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  >> |  >> / Tune+ |
|  I< |  I<< / Preset- |
|  >I |  >>I / Preset+ |
|  Rec |  Rec / Rec Mode |
|  Stop |  Stop / Hold |
|  Tv Vol+ |  Vol+ |
|  Tv Mute |  Mute / Dimmer |
|  P+ |  CH+ / Page+ |
|  Tv Vol- |  Vol- |
|  P- |  CH- / Page- |
|  1 |  1 |
|  0 |  0 |
|  3 |  3 |





| Original | | Recharge | | Original | | Recharge | |
|----------|----------|----------|------------------------|----------|--|----------|--|
| | 4 | | 4 | | | | |
| | 5 | | 5 | | | | |
| | 6 | | 6 | | | | |
| | 7 | | 7 | | | | |
| | 8 | | 8 | | | | |
| | 9 | | 9 | | | | |
| | Subtitle | | Subtitle / EQ | | | | |
| | 2 | | 2 | | | | |
| | Audio | | Audio / Lang I/II | | | | |
| | Rec Mode | | Shift + Rec / Rec Mode | | | | |
| | Timer | | Sleep / Timer | | | | |
| | Edit | | Zoom / Size | | | | |
| | Showview | | Smart / List | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

