





 




 

 



 





Original	Recharge
 Power	 Power
 Optical	 Setup / OPT /
 Audio In	 Audio / Lang I/II
 HDMI ARC	 Exit / Cancel / Clear
 AUX	 7
 USB	 8
 COAX	 Display / Media
 I<	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >I	 >>I / Preset+
 Bass+	 CH+ / Page+
 Vol+	 Vol+
 Treble+	 Up
 Bass-	 CH- / Page-
 Mute	 Mute / Dimmer
 Treble-	 Down

Original	Recharge
 Vol-	 Vol-
 Sound	 Sound / Title
 Surround Off	 << / Tune-
 Surround On	 >> / Tune+
 Audio Sync-	 Left
 Audio Sync+	 Right
 Dim	 Shift + Mute / Dimmer
 Night	 Sleep / Timer

