



Original		Rechange		Original		Rechange	
	[i+]		Info / Angle		5		5
	P+		CH+ / Page+		6		6
	Up		Up		7		7
	Power		Power		8		8
	Vol-		Vol-		9		9
	Left		Left		[=]		Text / Goto
	Menu		Menu / Home		0		0
	Vol+		Vol+		P<P/Surf		Fav / Marker / PC
	Right		Right		Timer		Sleep / Timer
	Mute		Mute / Dimmer		[♦]		Setup / OPT /
	P-		CH- / Page-		[+]		Zoom / Size
	Down		Down		[?]/I-II		Audio / Lang I/II
	Input		AV / Input / RDS		Red/Picture		Red / Netflix / Search
	1		1		Red/Picture		Picture / Format
	2		2		Green/Sound		Green / APP / Repeat
	3		3		Green/Sound		Sound / Title
	4		4		Yellow/Timer		Yellow / YouTube / Repeat



