 

 

 

 



 

 

 

 

 





 







 





Original		Rechange	
	Power		Power
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	Audio/Lang		Audio / Lang I/II
	4		4
	5		5
	6		6
	Tv/Radio		TV/Radio /
	7		7
	8		8
	9		9
	Exit		Exit / Cancel / Clear
	CH.List		Smart / List

Original		Rechange	
	0		0
	Back		Back / Return
	Menu		Menu / Home
	CH-		CH- / Page-
	Up		Up
	CH+		CH+ / Page+
	Left		Left
	Enter		OK
	Right		Right
	Vol-		Vol-
	Down		Down
	Vol+		Vol+
	Setup		Setup / OPT /
	Play/Timeshift		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Eject		Eject / Surround





Original	Recharge
Rec	Rec / Rec Mode
Text	Text / Goto
<<	<< / Tune-
>>/Reveal	>> / Tune+
I<</Hold	I<< / Preset-
>>I/Sub.P	>>I / Preset+
SUB.T	Subtitle / EQ
Index/Title	Shift + Sound / Title
Size/Zoom	Zoom / Size
D.Menu	D.Menu / Top
EPG	Guide / EPG / -/--
FAV/Prog	Fav / Marker / PC
P.Mode/Lang	Picture / Format
S.Mode/Search	Sound / Title
Info/Display	Info / Angle
Red/Angle	Red / Netflix / Search
Green/Slow	Green / APP / Repeat

Original	Recharge
Yellow/A-B	Yellow / YouTube / Repeat
Blue/Repeat	Blue / Prime Video / Random

