



Original	Rechange	Original	Rechange
Input/Tuner	+ Shift + AV / Input / RDS	Stop	Stop / Hold
Open/Close	Eject / Surround	Play	Play / Slow
Standby	Power	Pause/Step	Pause / Step / Freeze
BT Audio	+ Shift + 9	I<<	I<< / Preset-
Optical	Setup / OPT /	<<	<< / Tune-
Display	Display / Media	>>	>> / Tune+
Home Menu	+ Shift + Menu /	>>I	>>I / Preset+
Menu	Menu / Home	SKP Level	D.Menu / Top
Up	Up	SKP Level	+ Shift + D.Menu / Top Menu
Preset Up	+ Shift + >>I / Preset+	Vol+	Vol+
Left/Tune-	Left	USB Rec	+ Shift + 8
Enter	OK	Mute	Mute / Dimmer
Right/Tune+	Right	Vol-	Vol-
Down	Down	Sound	Sound / Title
Preset Down	+ Shift + I<< / Preset-	1	1
Return	Back / Return	2	2
PopUp/Top	Smart / List	3	3



Menu



Original	Recharge
Marker	Fav / Marker / PC
4	4
5	5
6	6
Search	+ Shift + Red / Netflix /
7	7
8	8
9	9
Repeat	Green / APP / Repeat
Dimmer	+ Shift + Mute / Dimmer
0	0
Zoom	Zoom / Size
Clear	Exit / Cancel / Clear
Red/RDS	Red / Netflix / Search
Yellow/PTY Search	Yellow / YouTube / Repeat
Blue/ST/Mono	Blue / Prime Video / Random
Power Tv	+ Shift + Power

Original	Recharge
PR+ Tv	CH+ / Page+
Vol+ Tv	+ Shift + Vol+
AV/Input Tv	AV / Input / RDS
PR- Tv	CH- / Page-
Vol- Tv	+ Shift + Vol-
Sleep	Sleep / Timer

