


 
 
 
 
 
 
 
 

 

 

 
 


 
 






 


 
 

 


 


 
 


 



 



 



 



 
 










Original		Rechange		Original		Rechange	
	Standby		Power		Set Up		Options
	DISP Off		TV/R		Clear		Exit
	Sleep		Sleep		Menu		Menu
	Timer		AV		Return		Back
	Audio		Dual		Sound		Shift + Dual
	Subtitle		Subt		Vol+		Vol +
	Angle		3D		Vol-		Vol -
	1		1		Mute		Mute
	2		2		Up/Tune+		Up
	3		3		Down/Tune-		Down
	4		4		Right/Preset+		Right
	5		5		Left/Preset-		Left
	6		6		Enter		Ok
	7		7		Function Up		Ch +
	8		8		Function Down		Ch -
	9		9		Shuffle		Format
	0		0		Repeat		Text



