 

 

 
 
 
 
 

 



 

 

 
 


 
 
 



 

 

 
 




Original	Recharge
 Standby/On	 Power
 HDD/DVD	 Media
 I<</Prev	 I<<
 Pause	 Pause
 Stop	 Stop
 >>I/Next	 >>I
 <</II/<I	 <<
 Play	 Play
 >>/II>/I>	 >>
 Rec	 Rec
 Stop Rec	 Shift + Stop
 Help	 Back
 Info	 Info
 Guide	 Guide
 Disc Navigator/Top	 List
 ATV/DTV	 Pre Ch
 Return/Exit	 Exit

Original	Recharge
 Home Menu	 Smart
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 CH+	 Ch +
 CH-	 Ch -
 CM Back	 D. Menu
 CM Skip	 Eject
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Pause Line Tv	 Shift + Pause
 Timer Rec	 Sleep





Original	Recharge
REC MODE Rec Mode	SHIFT + REC MODE Shift + Rec
ONE TOUCH COPY One Touch	PICTURE FORMAT Format
AUDIO O))/Audio	SOUND DUAL Dual
SUBTITLE [...]/Subtitle	AD SUBT Subt
ANGLE Camera/Angle	SETTINGS OPT Options
INPUT SELECT Input Select	TIMER AV AV
DISPLAY Display	SHIFT + DISPLAY INFO Shift + Info
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Recharge
+ +	ECO 3D 3D
CLEAR CLEAR Clear	SHIFT + CLEAR EXIT Shift + Exit
TEXT Text	REPEAT TEXT Text
TV/DVD Tv/DVD	SEARCH TV/R TV/R
Power Tv Control	SHIFT + Power Shift + Power
INPUT SELECT Input Select Tv Control	SHIFT + TIMER AV Shift + AV
+ CH+ Tv Control	SHIFT + + CH Shift + Ch +
- CH- Tv Control	SHIFT + - CH Shift + Ch -
+ Vol+ Tv Control	+ VOL Vol +
- Vol- Tv Control	- VOL Vol -

