

 


 
 
 




 
 


 
 



















 



 



 

 

 

 





 



 





 




Original		Rechange		Original		Rechange	
	Power		Power		EPG		Guide
	Tv/DTV		TV/R		Return		Back
	1		1		Vol+		Vol +
	2		2		Vol-		Vol -
	3		3		PR+		Ch +
	4		4		PR-		Ch -
	5		5		Up		Up
	6		6		Down		Down
	7		7		Left		Left
	8		8		Right		Right
	9		9		OK		Ok
	0		0		Red		Red
	[i+]		Info		Green		Green
	Mute		Mute		Yellow		Yellow
	I-II		Dual		Blue		Blue
	Home Menu		Menu		[...]		Subt
	Exit		Exit		[≡?]		Eject



