

 

 
 
 

 

 
 
 




 



 



 

 
 
 








Original	Rechange
 Standby/On	 Power
 Disp Off	 Pre Ch
 Sleep	 Sleep
 Timer	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Set Up	 Options
 Clear	 Exit
 Menu	 Menu

Original	Rechange
 Return	 Back
 Sound	 Dual
 Mute	 Mute
 Up/Tune+	 Up
 Down/Tune-	 Down
 Right/Preset+	 Right
 Left/Preset-	 Left
 Enter	 Ok
 Function Up	 Ch +
 Function Down	 Ch -
 Shuffle	 3D
 Repeat	 Text
 Vol+	 Vol +
 Vol-	 Vol -
 <<	 <<
 Play	 Play
 Pause	 Pause



