







 



 

 

 



 





 





 

 



 

 

 

 





 

 

 



 

 
 


 















 

 



 









| Original | | Rechange | | Original | | Rechange | |
|---|--------------|---|-------------------|---|---------------|---|------------------------|
|  | Power |  | Power |  | Stop |  | Stop / Hold |
|  | Open / Close |  | Eject / Surround |  | Play |  | Play / Slow |
|  | Display |  | Display / Media |  | Pause |  | Pause / Step / Freeze |
|  | Audio |  | Audio / Lang I/II |  | Previous |  | I<< / Preset- |
|  | Subtitle |  | Subtitle / EQ |  | Next |  | >>I / Preset+ |
|  | Angle |  | Info / Angle |  | REV |  | << / Tune- |
|  | Setup |  | Setup / OPT / |  | FWD |  | >> / Tune+ |
|  | Menu |  | Menu / Home |  | Return |  | Back / Return |
|  | Top Menu |  | D.Menu / Top |  | <II Step/Slow |  | CH- / Page- |
|  | Multi Dial- |  | Down |  | Step/Slow II> |  | CH+ / Page+ |
|  | Multi Dial+ |  | Up |  | Search Mode |  | Red / Netflix / Search |
|  | Enter |  | OK |  | 1 |  | 1 |
|  | Function |  | Fav / Marker / PC |  | 2 |  | 2 |
|  | Video Adjust |  | Picture / Format |  | 3 |  | 3 |
|  | FL Dimmer |  | Mute / Dimmer |  | Clear |  | Exit / Cancel / Clear |
|  | Jog Mode 1 |  | Left |  | 4 |  | 4 |
|  | Jog Mode 2 |  | Right |  | 5 |  | 5 |





| Original | | Recharge | | Original | | Recharge | |
|---|------------------|---|-----------------------------|----------|--|----------|--|
|  | 6 |  | 6 | | | | |
|  | +10 |  | Guide / EPG / -/-- | | | | |
|  | 7 |  | 7 | | | | |
|  | 8 |  | 8 | | | | |
|  | 9 |  | 9 | | | | |
|  | 0 |  | 0 | | | | |
|  | Random |  | Blue / Prime Video / Random | | | | |
|  | Repeat |  | Green / APP / Repeat | | | | |
|  | Repeat A-B |  | Yellow / YouTube / Repeat | | | | |
|  | Program |  | TV/Radio / | | | | |
|  | Last Memory |  | Vol+ | | | | |
|  | Condition Memory |  | Vol- | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

