











 
 






 

 

 









 





 









 



Original	Rechange
Power	Power
Input 1	Shift + 1
Input 2	Shift + 2
Input 3	Shift + 3
Input 4	Shift + 4
Input 5	Shift + 5
PC	Fav / Marker / PC
[i+]/Timer/Info	Info / Angle
[i+]/Timer/Info	Sleep / Timer
CTRL HDMI	Shift + 0
[M]	Picture / Format
[↔]	Shift + Picture / Format
[←]	AV / Input / RDS
TV/DTV	TV/Radio /
1	1
2	2
3	3

Original	Rechange
4	4
5	5
6	6
7	7
8	8
9	9
0	0
P+	CH+ / Page+
Vol+	Vol+
P-	CH- / Page-
Mute	Mute / Dimmer
Vol-	Vol-
Exit	Exit / Cancel / Clear
Up	Up
EPG/DVD Top Menu/Guide	D.Menu / Top
EPG/DVD Top Menu/Guide	Guide / EPG / -/-
Left	Left













 

 



 

 

 















Original	Rechange	Original	Rechange
	Enter		OK
	Right		Right
	Home		Menu / Home
	Down		Down
	Return		Back / Return
	Red		Red / Netflix / Search
	Rec		Rec / Rec Mode
	Green		Green / APP / Repeat
	Pause		Pause / Step / Freeze
	Yellow		Yellow / YouTube / Repeat
	Stop		Stop / Hold
	Blue		Blue / Prime Video / Random
	Play		Play / Slow
	I<<		I<< / Preset-
	[...]		Subtitle / EQ
	>>I		>>I / Preset+
	[≡?]		Sound / Title
	<<		<< / Tune-
	[≡]		Zoom / Size
	>>		>> / Tune+
	[≡]		Text / Goto
	Tools		Setup / OPT /
	I-II		Audio / Lang I/II
	[ ]DVD/[≡+]		Smart / List
	[<>]/HDD		Display / Media


 








Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+ Tv	 Vol+
 Mute Tv	 Mute / Dimmer
 Vol- Tv	 Vol-
 Up	 Up
 EPG/DVD Top Menu/Guide	 D.Menu / Top
 EPG/DVD Top Menu/Guide	 Guide / EPG / -/--

Original	Rechange
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu/Home	 Menu / Home
 Down	 Down
 Return	 Back / Return
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Play	 Play / Slow
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+



