

 

 



 






 
 

 



 

 







 

 
 

 






 


 





Original	Recharge
 Power	 Power
 Continued	 Smart / List
 Open / Close	 Eject / Surround
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 FL Dimmer	 Mute / Dimmer
 CD / SACD	 AV / Input / RDS
 HDMI	 Shift + 0
 Top Menu	 D.Menu / Top
 Function	 Shift + Setup / OPT / Tools
 Exit	 Exit / Cancel / Clear
 Home Media	 Shift + Display / Media
 Menu / Popup	 Setup / OPT /
 Up	 Up
 Down	 Down
Left	Left

Original	Recharge
 Right	 Right
 Enter	 OK
 Home Menu	 Menu / Home
 Return	 Back / Return
 Red / Program	 Red / Netflix / Search
 Green / Bookmark	 Green / APP / Repeat
 Yellow / Zoom	 Yellow / YouTube / Repeat
 Blue / Index	 Blue / Prime Video / Random
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 1	 1
2	2





Original	Recharge	Original	Recharge
	3		3
	2nd Video		Shift + 1
	4		4
	5		5
	6		6
	2nd Audio		Shift + 2
	7		7
	8		8
	9		9
	A-B		Shift + Yellow / YouTube /
	Clear		Shift + Exit / Cancel / Clear
	0		0
	Repeat		Shift + Green / APP /
	Display		Display / Media
	Keylock		Text / Goto
	Replay		Vol+
	Skip Search		Vol-

Original	Recharge

