



Original	Rechange
Disc 1	Left
Disc 2	Up
Disc 3	Right
CD-R	OK
DISPLAY	MEDIA DISPLAY Display / Media
Stop	HOLD Stop / Hold
Pause	STEP-FREEZE Pause / Step / Freeze
Play	SLOW Play / Slow
<<	TUNE- << / Tune-
>>	TUNE+ >> / Tune+
I<<	PRESET- I<< / Preset-
>>I	PRESET+ >>I / Preset+
1	TV 1
2	DVD 2
3	CD-8TB 3
RANDOM	Prime Video RANDOM Blue / Prime Video / Random
4	VIDEO 4

Original	Rechange
5	TAPE 5 5
6	TUNER 6 6
REPEAT	APP REPEAT Green / APP / Repeat
7	AUX-HDD 7 7
8	USB 8 8
9	BLUETOOTH 9 9
FADER	DIMMER MUTE Mute / Dimmer
10/0	HDMI-BAT 0 0
>10 button"/> >10	GUIDE EPG Guide / EPG / -/--
PROGRAM	PROGRAM TV/RADIO TV/Radio /
CHECK	LIST SMART Smart / List
CLEAR	CLEAR EXIT CANCEL Exit / Cancel / Clear
SKIP	RETURN BACK Back / Return
SKIP SET	CH PAGE CH- / Page-
SKIP CLEAR	CH PAGE CH+ / Page+
PLAY MODE	OPT-TOOLS SETUP Setup / OPT /

