



Original	Recharge	Original	Recharge
Power	Power	Info	Info / Angle
Mute	Mute / Dimmer	[ I ]/Menu	Menu / Home
Red	Red / Netflix / Search	Up	Up
Green	Green / APP / Repeat	Source	AV / Input / RDS
Yellow	Yellow / YouTube / Repeat	Left	Left
Blue	Blue / Prime Video / Random	OK	OK
<< / [≡o]	<< / Tune-	Right	Right
>> / [≡?]	>> / Tune+	Down	Down
I<< / [≡+]	I<< / Preset-	EPG	Guide / EPG / -/-
>>I / [≡..]	>>I / Preset+	Exit	Exit / Cancel / Clear
Play	Play / Slow	Vol+	Vol+
Pause	Pause / Step / Freeze	FAV	Fav / Marker / PC
Stop	Stop / Hold	CH+	CH+ / Page+
[≡i]	Smart / List	Vol-	Vol-
Text	Text / Goto	REP/Rec	Rec / Rec Mode
Subtitle	Subtitle / EQ	CH-	CH- / Page-
Freeze	Shift + Pause / Step / Freeze	1	1






 






	Original	Recharge		Original	Recharge
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Audio		Audio / Lang I/II		
	0		0		
	Recall		Back / Return		

	Original	Recharge





Original	Recharge	Original	Recharge
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1

Original	Recharge	Original	Recharge
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1























Original	Recharge	
2	2	2
3	3	3
4	4	4
5	5	5
6	6	6
7	7	7
8	8	8
9	9	9
EPG	Guide / EPG / -/--	
0	0	0
FAV	Fav / Marker / PC	
Red	Red / Netflix / Search	
Green	Green / APP / Repeat	
Yellow	Yellow / YouTube / Repeat	
Blue	Blue / Prime Video / Random	
<</Hold	Shift + Stop /	
FAV-	Shift + Left	

Original	Recharge	
FAV+	Shift + Right	
-/--	Shift + Guide / EPG / -/--	





Original	Rechange	Original	Rechange
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4

Original	Rechange	Original	Rechange
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4





Original	Recharge	Original	Recharge
5	TAPE <b>5</b>		5
6	TUNER <b>6</b>		6
7	AUX - HDD <b>7</b>		7
8	USB <b>8</b>		8
9	BLUETOOTH <b>9</b>		9
Epg	GUIDE EPG		Guide / EPG / -/--
0	HDMI - SAT <b>0</b>		0
Fav	PC FAV MARKER		Fav / Marker / PC
Red	NETFLIX SEARCH		Red / Netflix / Search
Green	APP REPEAT		Green / APP / Repeat
Yellow	YouTube REPEAT A-B		Yellow / YouTube / Repeat
Blue	Prime Video RANDOM		Blue / Prime Video / Random
Freeze	SHIFT + STEP - FREEZE		Shift + Pause / Step /

