



























































 




 









 

Original	Recharge	Original	Recharge
 Power	 Power	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Vol+	 Vol+
 2	 2	 Vol-	 Vol-
 3	 3	 CH+	 CH+ / Page+
 4	 4	 CH-	 CH- / Page-
 5	 5	 Audio	 Audio / Lang I/II
 6	 6	 Aspect	 Eject / Surround
 7	 7	 Display	 Display / Media
 8	 8	 Tv/Radio	 TV/Radio /
 9	 9	 Rec	 Rec / Rec Mode
 0	 0	 Up	 Up
 -/--	 Shift + Guide / EPG / -/--	 Left	 Left
 Recall	 Back / Return	 OK/CH List	 OK
 Red	 Red / Netflix / Search	 Right	 Right
 Green	 Green / APP / Repeat	 Down	 Down
 Yellow	 Yellow / YouTube / Repeat	 Menu	 Menu / Home

Original	Recharge	Original	Recharge
 Power	 DIMMER / MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG I/II	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 INFO	
 MENU	 OK	 RETURN	 BACK
 CLEAR	 EXIT	 CANCEL	 LIST
 VOL+	 SMART	 CH PAGE+	 CH PAGE+
 VOL-	 MEDIA / DISPLAY	 CH PAGE-	 CH PAGE-
 TV	 DVD	 CD - STB	 CD - STB
 VIDEO	 TAPE	 TUNER	 TUNER
 AUX - HDD	 USB	 BLUETOOTH	 BLUETOOTH
GUIDE EPG	HDMI - BAT	PC	PC
NETFLIX	APP	YouTube	Prime Video
SEARCH	REPEAT	REPEAT A-B	RANDOM
 www.mandis.tv			





Original	Recharge
 Exit	 Exit / Cancel / Clear
 EPG	 Guide / EPG / -/--
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Text	 Text / Goto
 PVR/Hold	 Setup / OPT /
 Size	 Zoom / Size
 FAV	 Fav / Marker / PC
 Play	 Play / Slow
 Pause/Timeshift	 Pause / Step / Freeze
 Stop/Auto	 Stop / Hold
 Reveal	 D.Menu / Top
 Subtitle	 Subtitle / EQ
 <</Nicam	 << / Tune-
 >>/Freeze	 >> / Tune+
 I<</Index	 I<< / Preset-

Original	Recharge
 >>I/Subpage	 >>I / Preset+

