





 



 

 

 


 

 


 





 







Original	Recharge
 Power	 Power
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Info	 Info / Angle
 0	 0
 Recall	 Fav / Marker / PC
 prime video	 Shift + Blue / Prime
 Home	 Shift + Menu /
 YouTube	 Shift + Yellow / YouTube / Repeat

Original	Recharge
 Netflix	 Shift + Red / Netflix /
 Q.Menu	 D.Menu / Top
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK/List	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer



