



Original	Recharge
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 Lang	 Audio / Lang I/II
 [=].	 Subtitle / EQ
 *1	 Picture / Format
 Text	 Text / Goto
 Google Play	 Shift + Green / APP / REPEAT
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 i	 Info / Angle

Original	Recharge
 Left	 Left
 OK	 OK
 Right	 Right
 EXIT	 Exit / Cancel / Clear
 Down	 Down
 ←	 Back / Return
 V+	 Vol+
 P+	 CH+ / Page+
 V-	 Vol-
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





Original	Recharge
 8	 8
 9	 9
 [G]	 Guide / EPG / -/--
 0	 0
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Home	 Shift + Menu /
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime

Original	Recharge

