







 

























 




Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 I-II/Audio	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Rechange
 -/--/+10	 Guide / EPG / -/--
 QV	 Info / Angle
 Tv Menu	 Menu / Home
 Tv/Text	 Text / Goto
 Mix	 Setup / OPT /
 Call	 Back / Return
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Vol-	 Vol-
 Vol+	 Vol+
 P-	 CH- / Page-
 P+	 CH+ / Page+
 Red/DVD Setup	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Recharge	Original	Recharge
 Yellow	 Yellow / YouTube / Repeat	 <<	 << / Tune-
 Blue	 Blue / Prime Video / Random	 >>	 >> / Tune+
 Subtitle	 Subtitle / EQ		
 Pause	 Pause / Step / Freeze		
 Play/Hold	 Play / Slow		
 Zoom/Size	 Zoom / Size		
 D.Disp/Reveal	 Display / Media		
 D.Menu	 D.Menu / Top		
 Up/Index DVD	 Shift + Up		
 I<</Cancel	 I<< / Preset-		
 >>I/Subpage	 >>I / Preset+		
 Left DVD	 Shift + Left		
 Enter DVD	 Shift + OK		
 Right DVD	 Shift + Right		
 Eject	 Eject / Surround		
 Stop	 Stop / Hold		
 Down DVD	 Shift + Down		

